

## TRACK CORNER INSTRUCTIONS

### MSAR14 OUTER CORNER

#### PARTS INCLUDED:

KENDAL MODEL MSAR14




WHICH INCLUDES: 2 × MSA02




2 × MSA22




#### DIMENSIONS

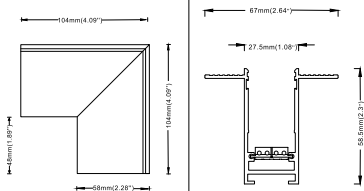


#### STEP 1 REMOVE END CAP FROM TRACK

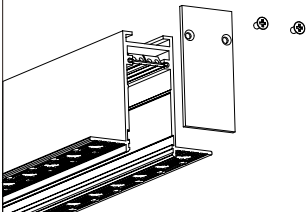

**STEP 2** INSTALL THE MSA22 PIN SET (b) INTO THE PIN CONNECTOR HOLES (c) ON THE TRACK. SLIDE THE TRACK CONNECTOR (a) INTO THE SLOT ON THE BACK OF THE TRACK SO YOU CAN STILL VISIBLY SEE THE PINS.

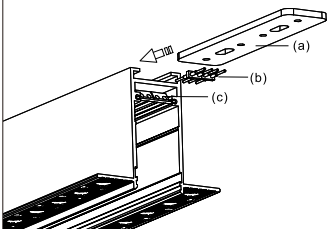


**STEP 3** SLIDE OUTER CORNER ONTO THE TRACK CONNECTOR (a) WHILE CAREFULLY LINING UP THE PIN SET WITH THE PIN CONNECTOR HOLES ON THE MSAR14 OUTER CORNER.

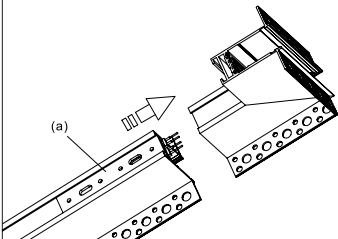


#### ATTENTION:


WHEN JOINING TRACKS OR ACCESSORIES UTILIZING PIN CONNECTORS, MAKE SURE PINS ARE HORIZONTAL AND LINE UP WITH PIN CONNECTOR HOLES. YOU MAY NEED TO GENTLY PUSH UP OR DOWN ON THE PINS SO THEY LINE UP CORRECTLY. FAILING TO DO THIS MAY RESULT IN PINS MISSING THE PIN CONNECTOR HOLES AND LOSS OF THE 24 VOLT CONNECTION.

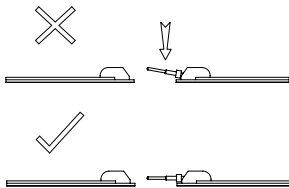

**STEP 4** SLIDE THE TRACK CONNECTOR (a) TOWARDS THE OUTER CORNER APPROXIMATELY HALFWAY AND SECURE WITH 4 SCREWS.

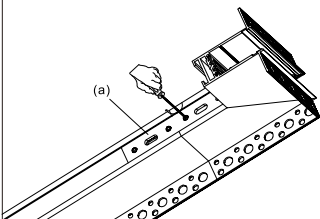

**STEP 5** REPEAT STEPS 1 THROUGH 4 FOR OTHER SIDE OF TRACK CORNER AND COMPLETE TRACK CORNER CONNECTION.

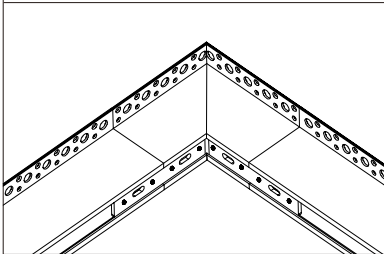

**NOTE:**

AFTER EACH TRACK CONNECTION A CONTINUITY TEST SHOULD BE DONE TO ENSURE PROPER ELECTRICAL CONNECTIONS WERE MADE.