

TRACK CORNER INSTRUCTIONS

MSAR26 CROSS CORNER

PARTS INCLUDED:

KENDAL MODEL MSAR26




WHICH INCLUDES: 4 × MSA02




4 × MSA22




DIMENSIONS

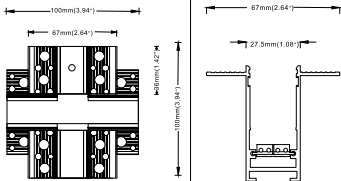


STEP 1 REMOVE END CAP FROM TRACK

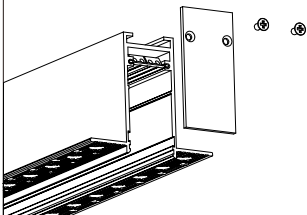

STEP 2 INSTALL THE MSA22 PIN SET(b) INTO THE PIN CONNECTOR HOLES (c) ON THE TRACK. SLIDE THE TRACK CONNECTOR (a) INTO THE SLOT ON THE BACK OF THE TRACK SO YOU CAN STILL VISIBLY SEE THE PINS.

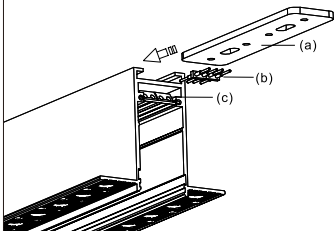


STEP 3 CONNECT CROSS CORNER TO THE TRACK BY CAREFULLY LINING UP THE PIN SET ON THE TRACK WITH THE PIN CONNECTOR HOLES ON THE MSAR26 CROSS CORNER AND PUSH TOGETHER.

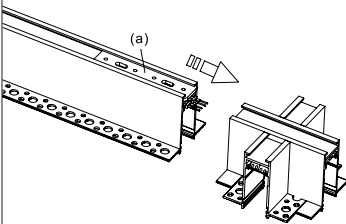


ATTENTION:


WHEN JOINING TRACKS OR ACCESSORIES UTILIZING PIN CONNECTORS, MAKE SURE PINS ARE HORIZONTAL AND LINE UP WITH PIN CONNECTOR HOLES. YOU MAY NEED TO GENTLY PUSH UP OR DOWN ON THE PINS SO THEY LINE UP CORRECTLY. FAILING TO DO THIS MAY RESULT IN PINS MISSING THE PIN CONNECTOR HOLES AND LOSS OF THE 24 VOLT CONNECTION.

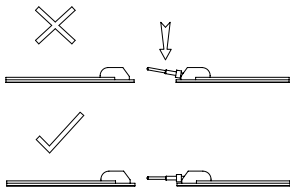

STEP 4 SLIDE THE TRACK CONNECTOR (a) ONTO THE CROSS CORNER AND SECURE WITH SET SCREWS.

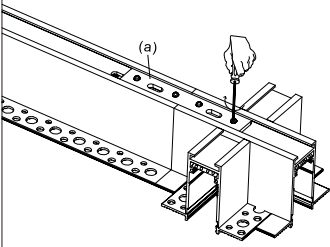

STEP 5 REPEAT STEPS 1 THROUGH 4 FOR OTHER THREE SIDES OF TRACK CORNER AND COMPLETE TRACK CORNER CONNECTION.

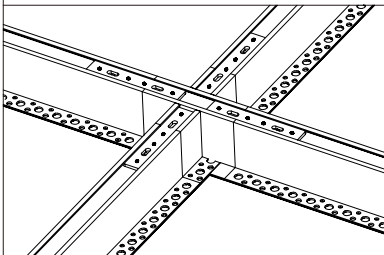

NOTE:

AFTER EACH TRACK CONNECTION A CONTINUITY TEST SHOULD BE DONE TO ENSURE PROPER ELECTRICAL CONNECTIONS WERE MADE.